

HISTORY KEPT YES <input type="checkbox"/> NO <input checked="" type="checkbox"/>		ILLINOIS HIGHWAY INFORMATION SYSTEM STRUCTURE INFORMATION AND PROCEDURE MANUAL	
NBIS REQUIRED YES <input checked="" type="checkbox"/> NO <input type="checkbox"/>		ITEM NAME SKEW ANGLE	ITEM NO. 34A PAGE 1 of 1 EFF. DATE 07/01/02
		ISIS	MMIS
RESPONSIBLE FOR UPDATE	District Program Development		N/A
STRUCTURES	All		N/A
UPDATE SCREENS	(1) Add New Structure (3) General Inventory 2		N/A
INQUIRY SCREENS	(2) Inventory Data 2		(1) Inventory Data 2 of 3

DESCRIPTION AND PURPOSE OF ITEM

This item indicates the skew angle of the structure. This is the angle between the centerline of a pier and a line perpendicular to the roadway centerline.

This measurement, in degrees, minutes and seconds, can be taken directly from plans. If no plans are available, the angle is to be field measured, if possible. If the skew varies, record the approximate average.

CODE AND SCREEN ENTRY INSTRUCTIONS

A six-digit field, two positions each for degrees, minutes and seconds.

Enter the value in the proper positions.

Fill unused spaces with zeros.

If there is no skew angle, leave blank.

EXAMPLE:

<u>Skew Angle</u>	<u>Enter</u>
5° 10' 30"	051030

Note: The degrees portion of this field must be between "00" and "90" and the minutes and seconds portion between "00" and "59".